


GB AWV 608

PROGRAMME TABLE

Whirlpool
is a registered trademark
of Whirlpool U.S.A.

	Eco Option
	1/2 Load Option
	Intensive Rinse Option
	Rinse Hold Option
	Rinse Hold
Cold	Cold
	No Spin
	Machine Off

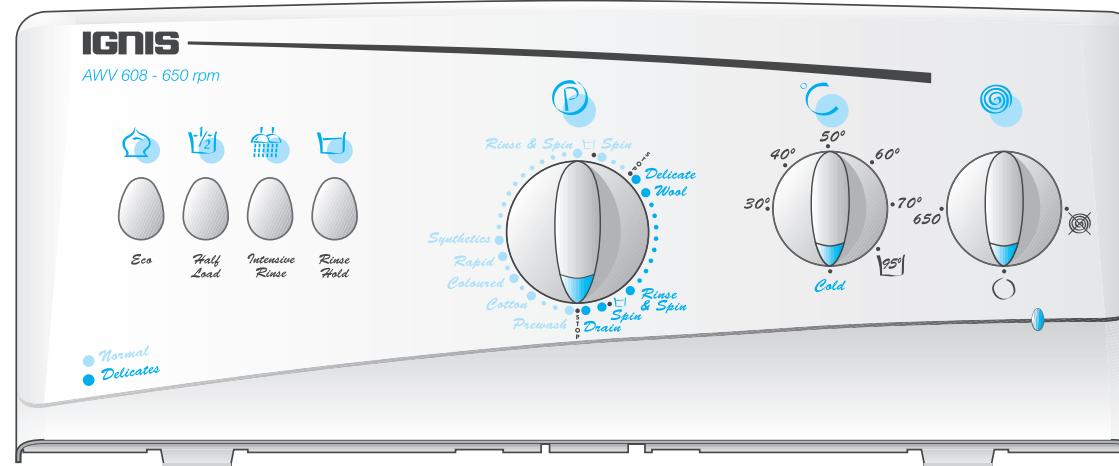

(1) Programme duration figures (guideline) are valid for maximum temperature wash with no special functions.

Programme	Type of fabrics / Degree of soiling / Notes	Max. Load kg	Detergent and Additives				Options				Temperature Selector °C	Maximum Spin Speed rpm	Programme time approx. min (1)
			Pre-wash	Washing	Softener	Bleach	Eco	Half Load	Intensive Rinse	Rinse Hold			
Cotton with Prewash	Heavily soiled sheets, tablecloths, underclothes, shirts etc. in hard wearing and high temperature resistant cotton. The maximum load for heavily soiled washing is 3.5 kg.	5.0	Yes	Yes	*	*	*	*	*	*	from "Cold" to 95	650	130
Cotton	Moderately soiled sheets, tablecloths, underclothes, towels etc. in hard wearing and high temperature resistant cotton.	5.0	—	Yes	*	*	*	*	*	*	from "Cold" to 95	650	115
Coloured	Averagey soiled blouses, shirts etc. made of polyester (Diolen, Trevira); polyamide (Perlon, Nylon), or cotton blends.	2.0	—	Yes	*	—	—	*	*	*	from "Cold" to 60	650	100
Rapid	Blouses, shirts, cotton blouses, dark coloured terry towelling, jeans, etc. lightly soiled.	5.0	—	Yes	*	—	—	*	*	*	from "Cold" to 40	650	85
Synthetics	Lightly soiled shirts, blouses etc., made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or cotton blends.	2.0	—	Yes	*	—	—	*	*	*	from "Cold" to 40	650	70
Rinse & Spin	This programme allows starch or softener to be added. It is followed by an intensive spin cycle.	5.0	—	—	*	—	—	*	—	*	"Cold"	650	20
Spin	Programme for intensive spin cycle.	5.0	—	—	—	—	—	—	—	—	—	650	15
Delicate	Delicate fabrics and curtains (dresses, skirts, shirts, blouses, etc.).	1.5	—	Yes	*	—	—	—	—	*	from "Cold" to 40	650	55
Wool	Machine washable woollens with pure new wool label. If the "Rinse Hold" option is selected don't leave the wash to soak for too long.	1.0	—	Yes	*	—	—	—	—	*	from "Cold" to 40	650	45
Rinse & Spin	This programme allows starch or softener to be added. It is followed by a gentle spin cycle.	1,5	—	—	*	—	—	—	—	*	"Cold"	650	15
Spin	Programme for gentle spin cycle.	1.5	—	—	—	—	—	—	—	—	—	650	10
Drain	Drain only, without spin cycle. Alternative way to end programmes after a "Rinse Hold".	—	—	—	—	—	—	—	—	—	—	—	5

N.B. The excess of detergent in the dispenser could cause technical problems.

5019 100 01064


ENERGY AND WATER CONSUMPTION DATA					
Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Programme time (min)
Cotton + Intensive Rinse	90	5.0	72	1.80	115
Cotton	60	5.0	66	1.15	115
Coloured + Intensive Rinse	60	2.0	66	0.80	100
Coloured	40	2.0	60	0.40	100
Rapid + 1/2 Load	40	2.5	54	0.50	85
Synthetics + 1/2 Load	30	1.0	54	0.30	70
Delicate	40	1.5	70	0.65	55
Wool	40	1.0	70	0.55	45

Programmes with prewash last about 15 minutes more than programmes without prewash. Water and energy consumption values were measured in standard conditions in compliance with the Standard IEC 60 456. Individual consumption may vary in comparison with the values specified in the table, because of differences in supply water pressure and temperature, the load and the type of wash.

ADDING DETERGENT AND ADDITIVES

Pour the detergent and additives into the respective compartments as follows:

- Programme with pre and main wash
- Main wash programme without prewash
- Fabric softeners and starch
- Bleach
- Stain removers
- Anti-scale agents (water hardness 4)

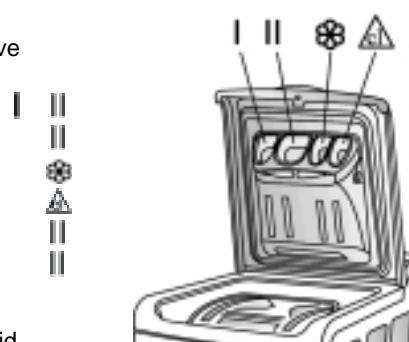

Important Note:

- Do not fill beyond the "MAX" level mark.
- For programme with prewash: do not use liquid detergent.
- For programmes without prewash from cold to 40° C, it is recommended to use a liquid detergent to avoid whitish residues on the coloured laundry.

CLOSE THE DOOR AND SELECT THE PROGRAMME

1. Turn the **programme selector knob** clockwise to the desired programme.
2. Turn the **temperature knob** to the required temperature.

PRESS ANY DESIRED OPTION BUTTON(S)

"Eco" button

- The wash time is extended and the water temperature is reduced.
- This function saves about 30% in energy without compromising the excellent results of the wash.

"Intensive Rinse" button

- The water level increases for improved rinsing efficiency.
- This option is particularly suitable for areas with very soft water when washing baby linen and helps people with allergies.
- For improved garment care it is advised to use the option for the Cotton 90° C and the Coloured 60 °C programme.

"Half Load" button

- Reduces the water consumption in the "Cotton" and "Synthetics" programmes especially during the rinse.
- Especially suitable for lightly soiled or small loads (reduces the quantity of detergent).
- Not suitable for high temperature programmes.

"Rinse Hold" button

- The laundry remains in the last rinse water, without progressing to the spin cycle to avoid creasing and prevent colours from changing.
- This option is especially recommended for the "Synthetics" or "Delicate" programmes.
- This option is perfectly suitable if you wish to postpone the spin or you don't wish to spin the clothes.

Note: the programme selector stops on .

Terminate the "Rinse Hold" option

- Press the "Rinse Hold" button again; the programme will terminate automatically with the spin cycle corresponding to the previously selected wash programme.
- If you do not wish to spin the clothes, switch off the appliance by pressing the "On/Off" button. The pilot light goes out. Turn the programme selector to the "Drain" position and switch on the appliance.

"No Spin" button

- It excludes the spin function from the programme.

PROGRAMME START

Open the water inlet tap and select the desired spin speed, turning the **spin speed and On/Off knob** to the desired position (the indicated spin speed or "No Spin"). The pilot lamp lights up.

DOOR LOCK

During the running programme, the door cannot be opened.

The door locks automatically in all programmes.

If the programme is stopped or if an electrical power failure occurs, the door unlocks automatically after about 1 minute.

PROGRAMME END

- The programme selector knob is at "STOP".
- 1. Turn the spin speed knob to the Off position "". The pilot light goes out.
- 2. Cancel the options by pressing the appropriate buttons.
- 3. Turn the water supply tap off.
- 4. Wait for the door to unlock (about 1 minute).
- 5. Open the door and the drum flaps and unload the machine.

SELECTING A NEW PROGRAMME, SPIN SPEED, OPTIONS AFTER PROGRAMME START

1. Turn the spin speed knob to the Off position " to switch off the appliance. The pilot light goes out.
2. Select the new programme, temperature and options.
3. Turn the spin speed knob to the desired spin speed to switch on the appliance. The pilot light lights.

TO STOP, RESET A PROGRAMME BEFORE THE END

1. Turn the spin speed knob to the Off position " to switch off the appliance. The pilot light goes out.
2. Set the programme selector on "Drain".
3. Turn the spin speed knob to the desired spin speed to start the "Drain" programme. Only open the door when the programme selector is at "STOP" and the door is unlocked (after approximately 1 minute)